

E-Drive II

NEW Electronic Speed Drive

For the Collarette series





Contents

Collarette Cutting Machines	6
Features	7
7" Color Touch Panel Display	8
Quick Selections for Main / Turntable Speed	10
Jog Mode	12
Settings of Machine Speed	14
Settings of Turntable Speed	16
Synchronization of Turntable	18
Running Mode	20
Roll Complete	22
Alarm	24
Meter / Yard Counter (option)	26
Service	28



EC 100



EC 200



EC 200-C



EC 200-CS



EC 300



EC 300-S



EC 300-XS


Features

- 7" Touch Panel
- User friendly software
- Integrated system - less hardware/control buttons
- Full visual view and control of settings
- Easy trouble-shooting
- Integrated meter/yard counter as option
- Fast and easy setting of machine speed as well as turntable speed

7" Color Touch Panel Display


Main Screen

Full visual view and control of settings.

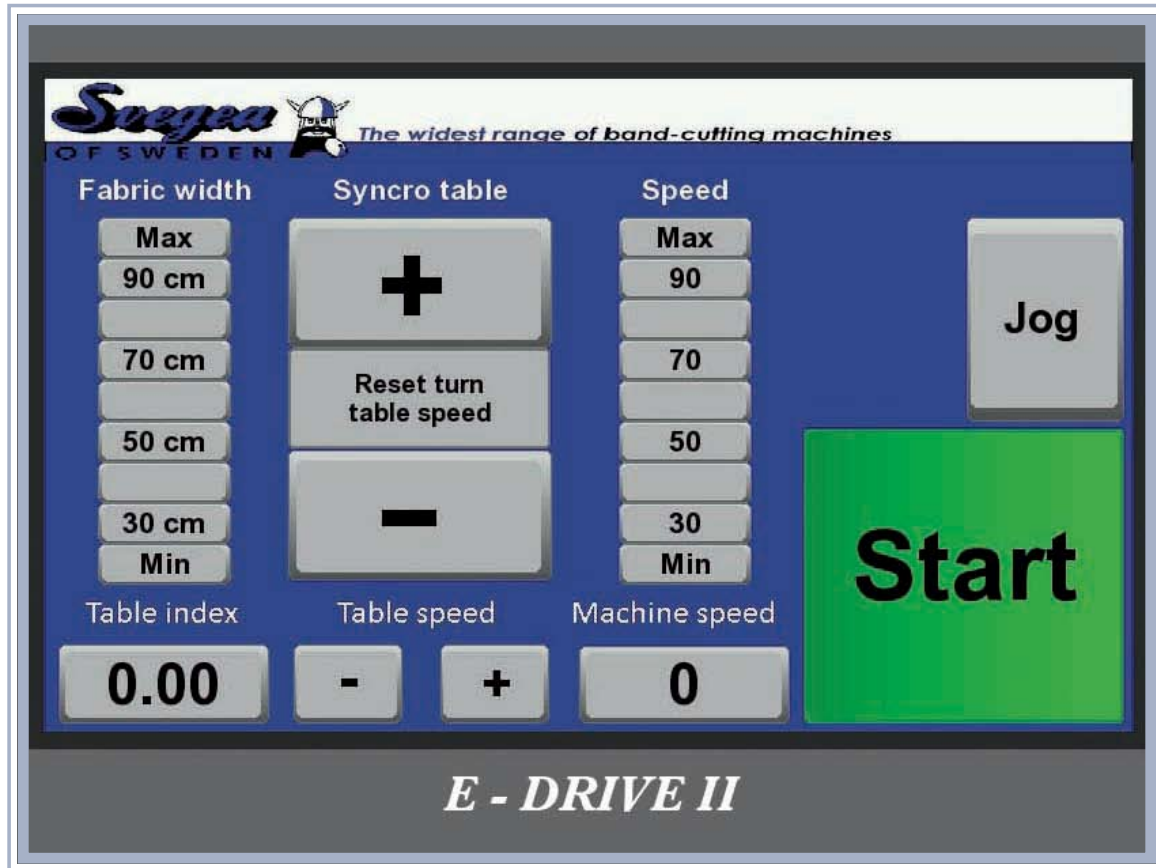

Quick Selections for Main/Turntable Speed



Quick Selections for Main/Turntable speed

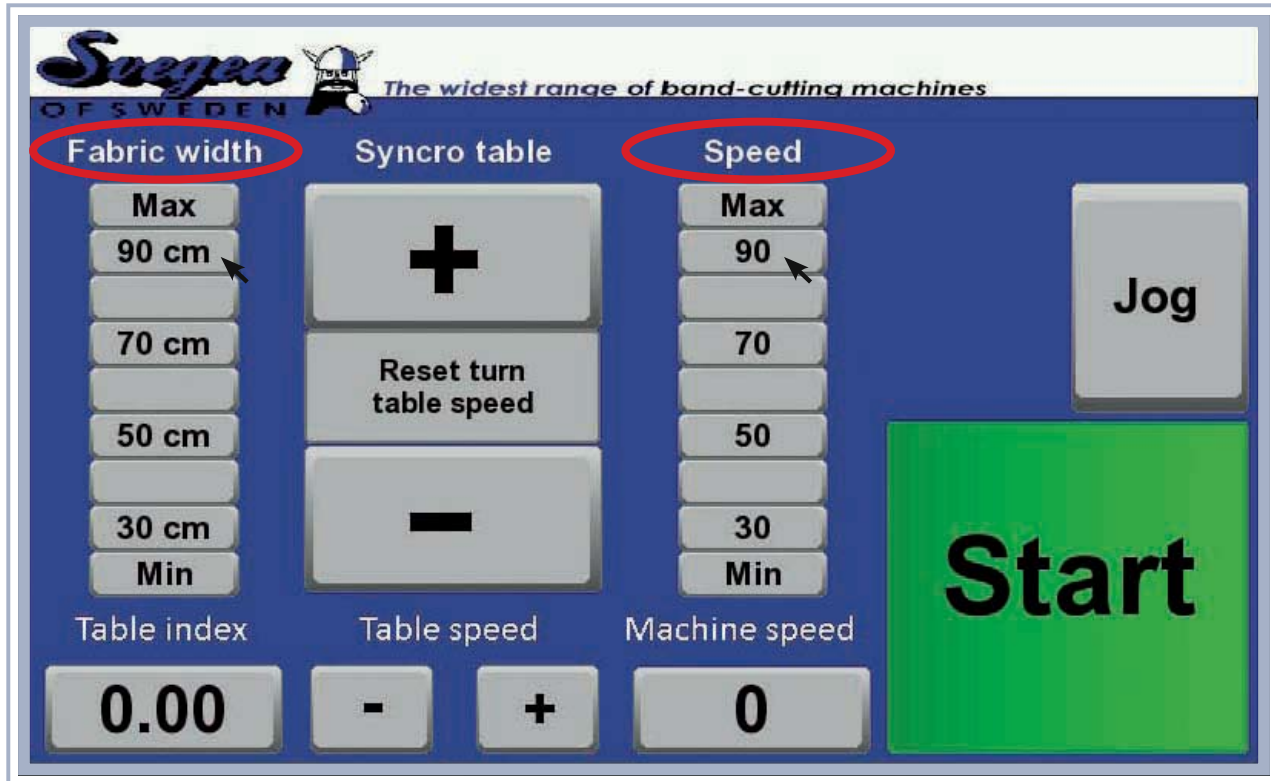

Jog Mode

Jog Mode


Quick select of Jog speed.

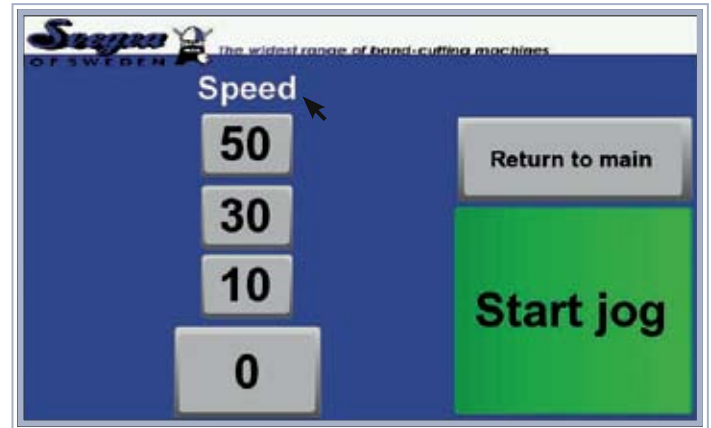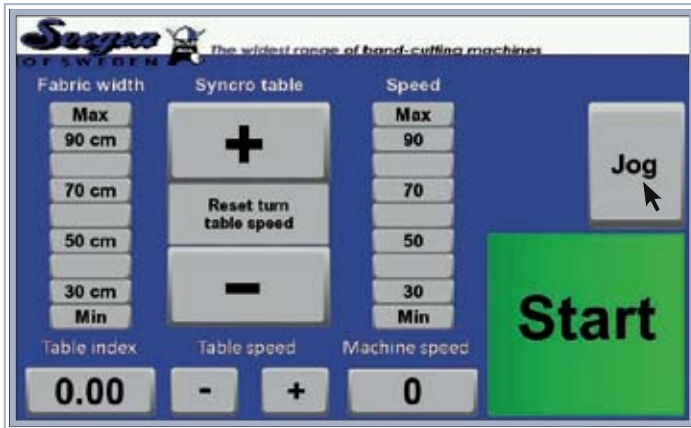

Settings of Machine Speed

Settings of Machine Speed

Quick select button or key input.

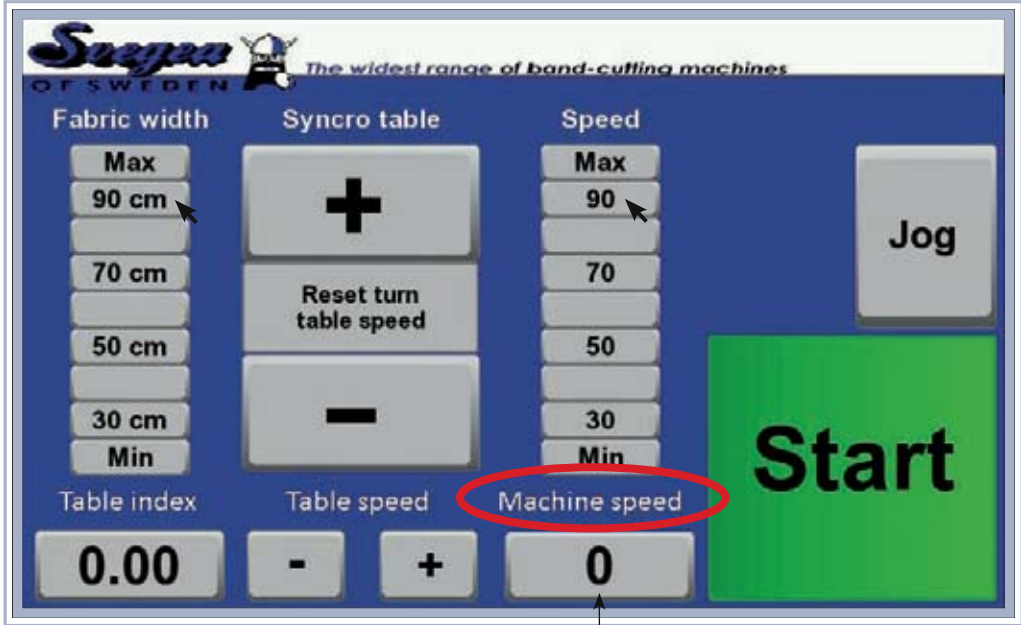


Key-input
Pop-up windows

Settings of Turntable Speed

Settings of Turntable Speed


Quick select button, key input or -/+ keys.

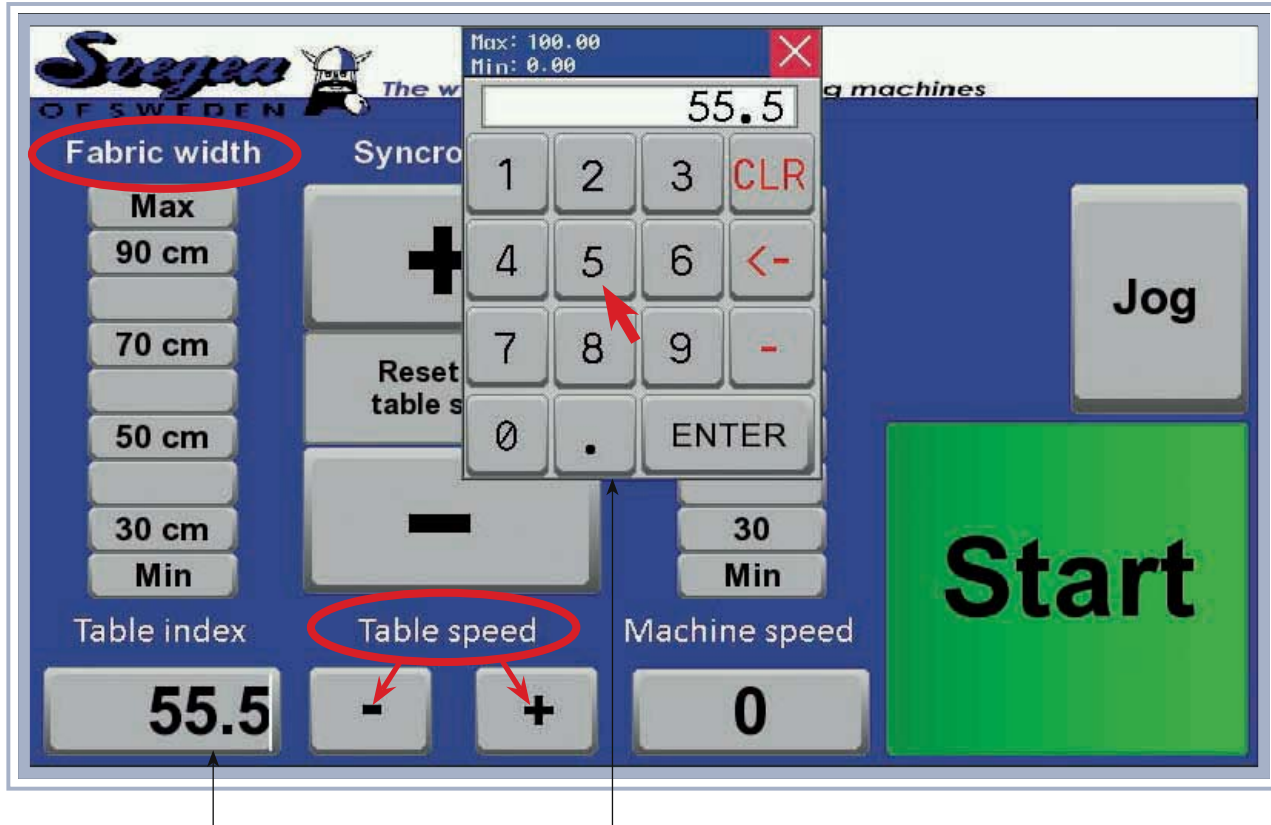


Synchronization of Turntable

Synchronization of Turntable

Confirm (Reset) table speed.

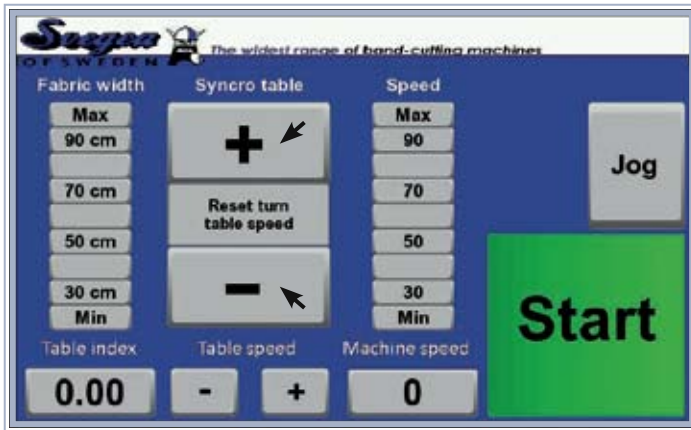

Step 1


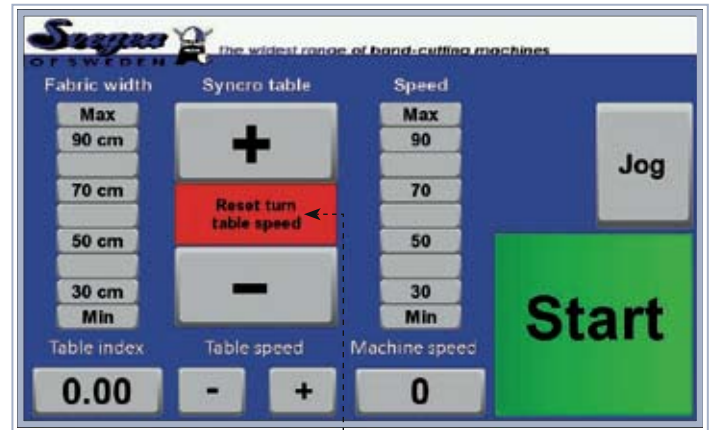


Step 2

Running Mode

Running Mode


Start and Stop.

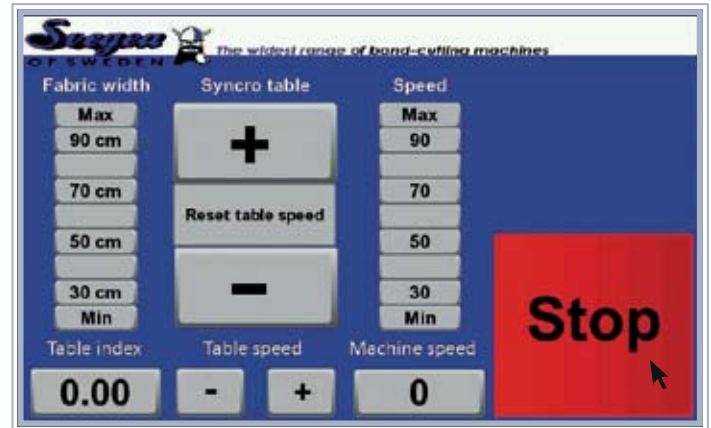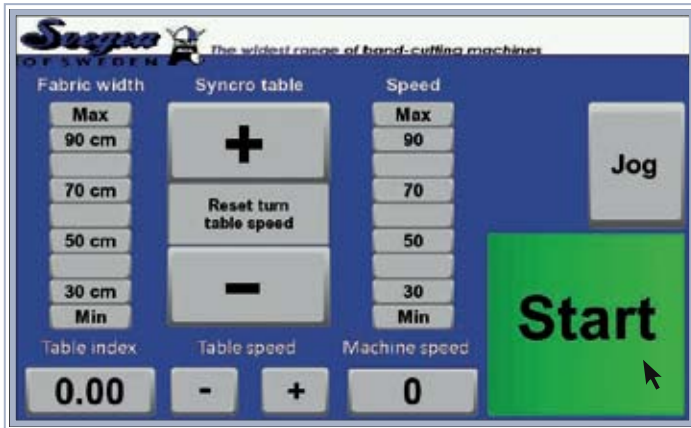

Roll Complete

Roll Complete

Displayed on Screen and easy visual testing.

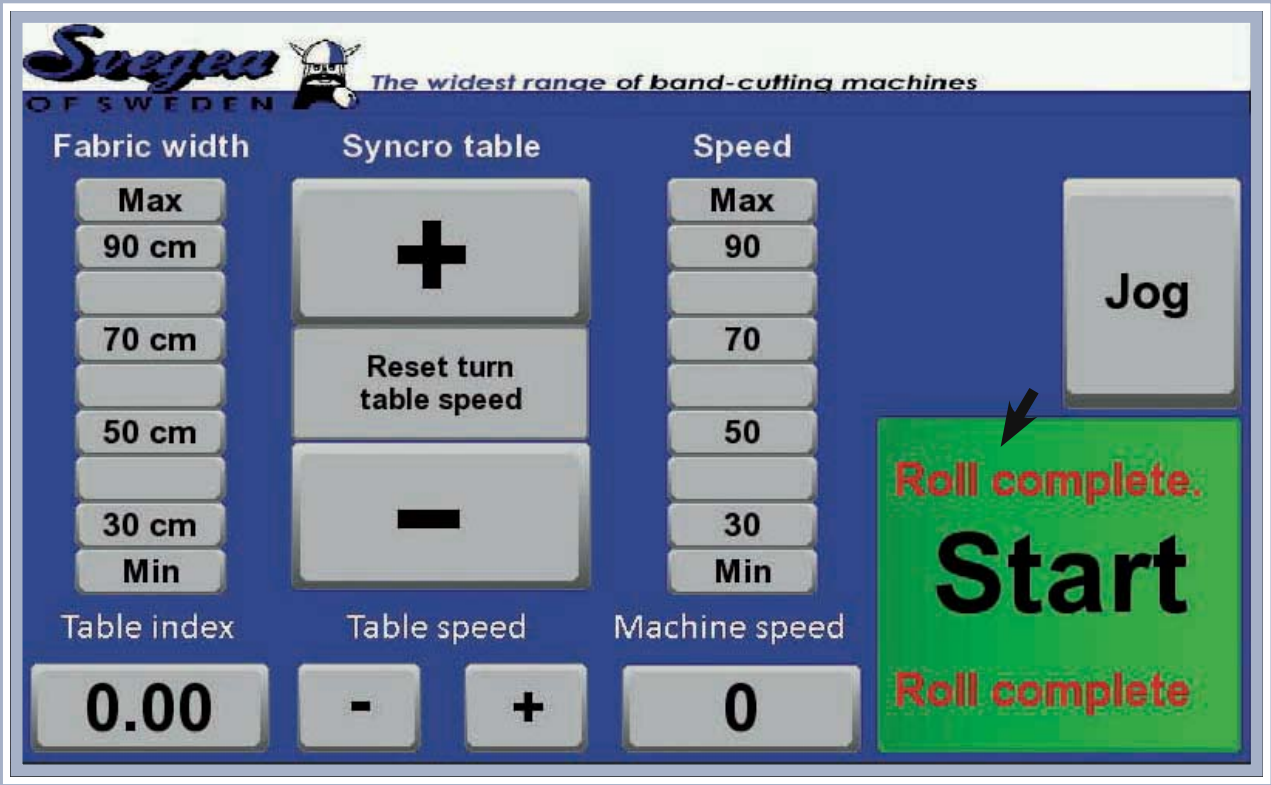

Alarms




Alarm Band watcher




Emergency stop

Meter / Yard Counter

Meter / Yard Counter (option)

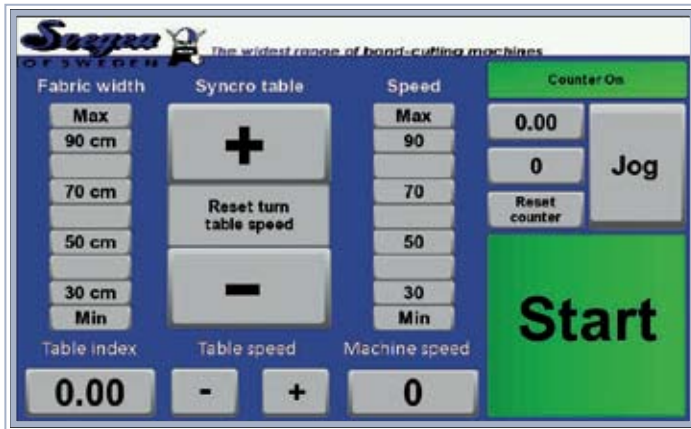

Counter On

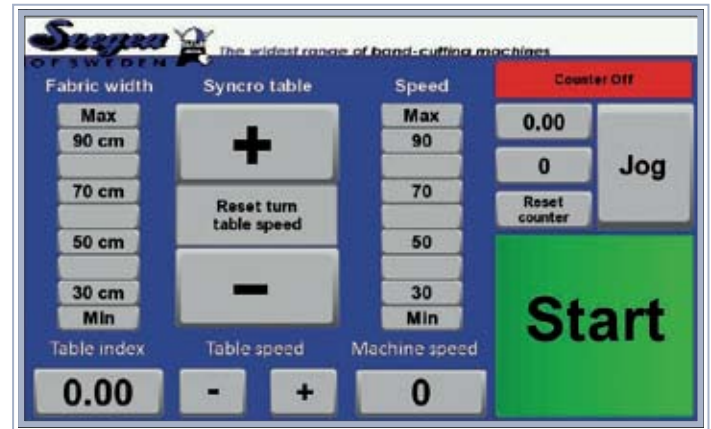


Counter Off

Service

Service

Service settings.

Master enabled	<input type="checkbox"/>	<input type="checkbox"/>			
Slave enabled	<input type="checkbox"/>	<input type="checkbox"/>			
					
	Master		Slave		
Maximum freq (FH)	<input type="text" value="94.00"/>	Maximum freq (FH)	<input type="text" value="120.00"/>		
Upper Limit Freq (UL)	<input type="text" value="85.70"/>	Upper Limit Freq (UL)	<input type="text" value="120.00"/>		
Lower Limit Freq (LL)	<input type="text" value="0.00"/>	Lower Limit Freq (LL)	<input type="text" value="0.00"/>		
Acc untwist	<input type="text" value="0"/>	Increase/decrease slave	<input type="text" value="0.00"/>		
Dec untwist	<input type="text" value="0"/>	Quickstop	<input type="text" value="0"/>		
Master Acc	<input type="text" value="25"/>	Softstop	<input type="text" value="0"/>		
	<input type="text" value="0"/>		<input type="text" value="0"/>	Display counter <input type="text" value="0"/>	
				Omkrets (meter, feet etc)	
	Täljare		Nämnamre		

Specifications and appearance are subject to change without prior notice for improvements.

Svegea of Sweden AB Junogatan 5, SE-451 42 Uddevalla, SWEDEN

Tel: +46 522 368 00 • Fax: +46 522 333 99 • Email: info@svegea.se • Website: www.svegea.se

